



## Starting a Dive

### Without a destination file on memory card

1. On the Main Menu, select START DIVE
2. Use the <— and —> buttons to select the correct dive number, then press ENTER
3. Use the <— and —> buttons to select Y or N on SAVE ENTRY, then press ENTER
4. The main dive screen is then displayed

### With a destination file on memory card

1. From the Main Menu, select PRE DIVE
2. On the Pre Dive Menu, select SELECT DESTFILE
3. Use the <— and —> buttons to select correct destination file, then press ENTER
4. On the Pre Dive Menu, select MAIN MENU
5. On the Main Menu, select START DIVE
6. Use the <— and —> buttons to select the correct dive number, then press ENTER
7. Use the <— and —> buttons to select Y or N on SAVE ENTRY, then press ENTER
8. The main dive screen is then displayed

## During a Dive

### Save current position to memory card

1. From the main dive screen, press the DOWN button
2. On the SAVE POSITION screen, use the <— and —> buttons to select the position description, then press ENTER

### Navigate to a stored position

1. From the main dive screen press the DOWN button twice
2. On the NAVIGATE TO: screen, use the <— and —> buttons to select the correct target location, then press ENTER

### Track position during the dive

1. From the main dive screen, press the DOWN button three times
2. On the TRACK POSITION screen with Y selected, press ENTER
3. To turn tracking off, use the <— and —> buttons to select N on the TRACK POSITION screen, then press ENTER

## Advanced Functions

### Store Saved Positions to a Destination File

1. On the Main Menu, select POST DIVE
2. On the Post Dive menu, select SAVED POSITIONS
3. On the Saved Positions screen, use the <— and —> buttons to select the correct saved position that is to be saved to the destination file, then press ENTER
4. Repeat #3 above for each saved position to be saved
5. When complete, press ENTER when on the Save to Dest File screen and the CANCEL message is shown



V1.03